


Apple/ Android 2IN1 Color Alcohol Tester

User Manual

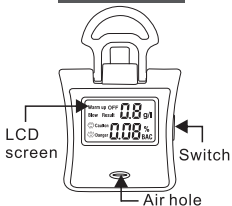


1. Please connect this product to Apple or Android devices (Android device must support OTG function), then unlock the devices, then press switch of tester for a long time till Tester alert short buzzing, at the same time LCD screen will appear green matching indicator.
2. State "warm up" Number jump from 10 to 0, it will finish preheating procedure.
3. When blow 10 seconds countdown, pls let mouth close to pore under tester, and blow to air hole and exhale into sensor for 3 to 5 seconds, after finishing Countdown,

display screen will show the test result. if there is no detection to alcohol or alcohol content normal, the LCD screen keep green.

4. If test report can reach to the scope below, the LCD screen change to yellow and "Caution" will show. $\sqrt{0.02\% \text{ BAC (or } 0.2\text{g/l) to } 0.05\% \text{ BAC (or } 0.5\text{g/l)}}$
5. If test report can reach to the scope below, LCD screen change to red and "Danger" will show, the buzzer will alarm keep alert. $\sqrt{\text{over \& EQUAL } 0.05\% \text{ BAC (or } 0.5\text{g/l) over \& EQUAL } 0.08\% \text{ BAC (or } 0.8\text{g/l)}}$

苹果/安卓 2IN1彩屏 酒精测试仪

User Manual

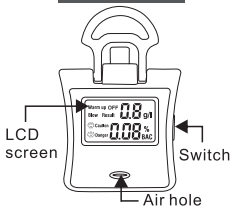

1. 将本产品接入苹果或者安卓设备(安卓设备需支持OTG功能),再将设备解锁,然后长按测试仪开机键,直至测试仪发出短促蜂鸣声,此时LCD屏幕为绿色并有相应显示。
2. 状态warm up数字会由10跳到0,此即便完成预热程序。
3. 状态blow 10秒倒计时时将口部靠近测试仪下方气孔,并连续3-5秒呼气到感应器内,倒数结束后,显示屏即会显示测试结果,若没有检测到酒精或酒精含量正常,则LCD屏幕一直保持绿色。

4. 当测试结果达到下列范围时, LCD屏幕变为黄色并且 " Caution " " 警告 " 字样便会显示 ;

$0.02\% \text{ BAC (or } 0.2\text{g/l) to } 0.05\% \text{ BAC (or } 0.5\text{g/l)}$

5. 当测试结果达到下列的范围, LCD屏幕变为红色并且 " Danger " " 危险 " 字样便会显示,蜂鸣器持续报警 ;

$\text{over \& EQUAL } 0.05\% \text{ BAC (or } 0.5\text{g/l) over \& EQUAL } 0.08\% \text{ BAC (or } 0.8\text{g/l)}$